



APPLICATIONS THAT FIT:

FORD / INTERNATIONAL

Mill Supply Inc., 19801 Miles Rd., Cleveland, OH 44128

MIRRORS that fit FORD VANS



See Page 88
for Fold-Away
Mirrors

90-03-369 LH Telescopic Mirror Assembly that fits 2003-on E Series Vans

90-03-370 RH Telescopic Mirror Assembly that fits 2003-on E Series Vans

SUPER-VU - Wide Angle Convex Mirror • Sold in Pairs
Fits E-Series Mirrors (90-03-369 & 90-03-370 shown above) and F-250-F550 Series Tow Mirrors.

Triple Wide angle viewing

- No vibration
- Less eye strain
- Integral styling
- Installs in minutes



From this... ▲



...To this! ▲

Triple
your
viewing
area!

61480 - Super View Convex Mirror Extension. One Pair of LH and RH

REAR CROSS VIEW SAFETY SYSTEM

These safety systems provide the driver with the ability to view the dangerous blind spot area around the rear bumper of the vehicle. Being able to view this area before backing-up can help reduce accidents. Comes with tripod bracket, 8-1/2" convex wide view mirror head, stainless steel hardware and rivnut fasteners for mounting.


Fit 1992 and Newer Fords

WHITE 8" ASSEMBLY

Complete Assembly **713120**
White Mirror Head Only **708450**

STAINLESS STEEL 8" ASSEMBLY

Complete Assembly **713121**
S.S. Mirror Head Only **708448**

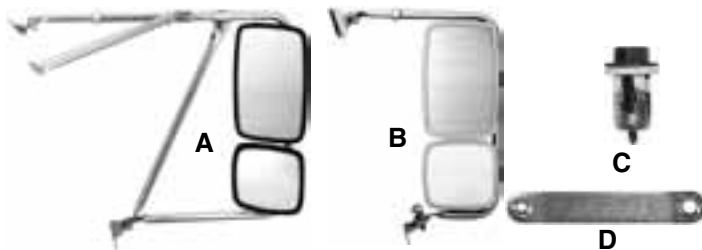

WIDE ANGLE MIRRORS that fit FORD VANS

Index#	Description	Mill Part#
A	Mirror Assy, wide angle, wide body (96"), S.S.	714675
B	Mirror Assy, wide angle, standard van body. S.S.	714673
C	Bolt and rubber coated Nut Fastener for Mirrors, 25/box	AV-13232
D	Friction Wrench to mount fastener AV-13232	AV-14156-P

WEATHERSTRIP

Index#	Description	Year	Mill Part#
N.I.	Weatherstrip, on body of truck for front door, fits L or R	92-07	91-92-201
N.I.	Weatherstrip, on front door, LH door	92-07	91-92-202
N.I.	Weatherstrip, on front door, RH door	92-07	91-92-203
N.I.	Doorseal, rear cargo door, drivers side	92-07	91-92-207
N.I.	Doorseal, rear cargo door, passenger side	92-07	91-92-208

STEERING COLUMNS that fit FORD VANS

Year	Air Bag	Tilt	Overdrive/Cruise	OEM No.	Mill No.
92-96	Air Bag	Tilt	w/o Overdrive button	SCG1997B	91-92-403
92-96	Air Bag	w/o Tilt	w/o Overdrive button	SCG1997A	91-92-402
92-96	Air Bag	Tilt	w/ Overdrive button	SCG1752C	91-92-404
92-96	Air Bag	w/o Tilt	w/ Overdrive w/ Cruise	SCG1752B	91-92-405
92-96	Air Bag	w/o Tilt	w/ Overdrive w/o Cruise	SCG1752A	91-92-406
92-96	w/o Air Bag	Tilt		SCG1754B	91-92-407
92-96	w/o Air Bag	w/o Tilt		SCG1754A	91-92-408
97-98	Air Bag	Tilt	w/o Overdrive button	SCG2534B	91-97-411
97-98	Air Bag	w/o Tilt	w/o Overdrive button	SCG2534A	91-97-412
97-98	Air Bag	Tilt	w/ Overdrive button	SCG2533C	91-97-413
97-98	Air Bag	w/o Tilt	w/ Overdrive w/ Cruise	SCG2533B	91-97-414
97-98	Air Bag	w/o Tilt	w/ Overdrive w/o Cruise	SCG2533A	91-97-415
97-98	w/o Air Bag	Tilt		SCG2535B	91-97-416
97-98	w/o Air Bag	w/o Tilt		SCG2535A	91-97-417
99-00	Air Bag	Tilt	w/ Cruise	SCG2533C	91-99-421
99-00	Air Bag	w/o Tilt		SCG2533A	91-99-422
01-07	Air Bag	Tilt		SCG2533E	91-01-426
01-07	Air Bag	w/o Tilt		SCG2533D	91-01-427

LAMPS AND MARKERS that fit FORD VANS


Index#	Description	Year	Mill Part#
N.I.	Headlamp assembly, composite type (L or R)	92-96	91-92-91
N.I.	Headlamp assembly, composite type (L or R)	97-07	91-97-91
N.I.	Park/side marker lamp (L or R), 92 to 12/2/02	92-02	91-92-92
N.I.	Park/side marker lamp (L or R) from 12/03/02	02-03	91-02-92
N.I.	Park/side marker lamp (L or R)	04-07	91-04-92
N.I.	Tail lamp assembly (L or R)	92-94	91-92-95
N.I.	Tail lamp assembly (L or R)	95-03	91-95-96
N.I.	Tail lamp assembly (L or R)	04-07	91-04-97

LAMP PLUGS


AV-19126 - Plugs into light socket base for single filament wedge type bulb, back up lights.



AV-19125 - Plugs into light socket for double filament wedge type bulbs. Stop/tail/turn & parking lights.

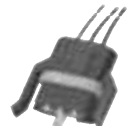

INTERNATIONAL SCOUT II 72-80

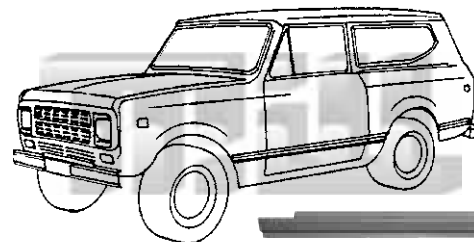

79

40

REPLACEMENT BODY PANELS

Index#	Description	Year	Mill Part#
40	Rocker panel (steel), no ext.up post	72-80	33-71-40
79	Cab support	72-80	33-72-79

WEATHERSTRIP

Index#	Description	Year	Mill Part#
N.I.	Belt weatherstrip set, 4 pcs.	72-80	33-72-215
N.I.	Door seal set, 2 pcs.	72-80	33-72-222

Specify LH (Drivers Side) or RH (Passenger Side) when ordering



Bold Type - New Item • ** Too large for UPS • N.I. Not Illustrated
800-888-5072 • Toll Free Fax 888-781-2700
Visit our web site: www.rustrepair.com



All manufacturers' names, numbers, and descriptions are used for reference purposes only. It is not implied that any part listed is the product of the original manufacturers or approved by any of these manufacturers.