




**Door Bottoms with Bottom Lip**




**J-11560** - 59"L x 11.5"H, Universal door bottom with 5/8" lip to wrap bottom edge.

**J-5560** - 59"L x 5.5"H, Universal door bottom with 3/8" lip to wrap bottom edge.

**Door Bottom with Inside Bottom**

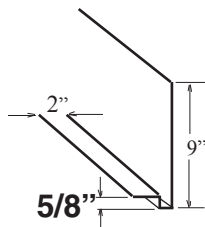


**DB-4** 9" x 59"L (with 2" bottom and 1" lip)

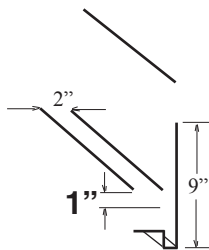


**DB-3** 9" x 59L (with 2" bottom and 5/8" lip)

**Flex Edge with Tabs on One Side**

For inside or outside curves. Saves time and labor when rebuilding a new lip for wheel arch areas and no repair section is available.

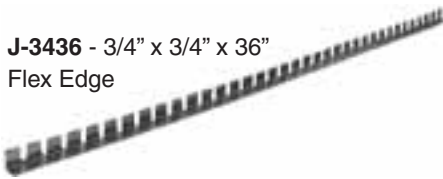

**J-3436** - 3/4" x 3/4" x 36"  
Flex Edge

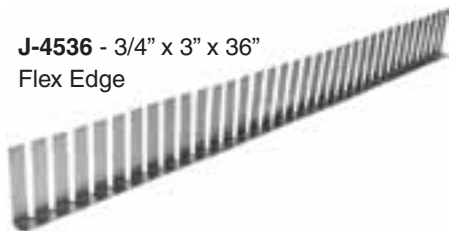

**J-4536** - 3/4" x 3" x 36"  
Flex Edge

**On all universal sheet metal there is a minimum order 3 pieces of any one length**

**Cold Rolled Flat Sheet Steel**

Part no.	Gauge	Size
<b>CRS-2424-G</b>	24ga	24"x48"
<b>CRS-2422-G</b>	22ga	24"x48"
<b>CRS-2420-G</b>	20ga	24"x48"
<b>CRS-2418-G</b>	18ga	24"x48"
<b>CRS-2416-G</b>	16ga	24"x48"
<b>J-6060</b>	22ga	6"x60"




**Floor Support 2" Hat Channel**



**FSC-36** - "A" Dim: 2" x 36"L, 18 gauge  
**SR6X-48** - "A" Dim: 2-1/16" x 48"L, 16 gauge  
4-1/16" overall width

**1/8" Angle Iron**

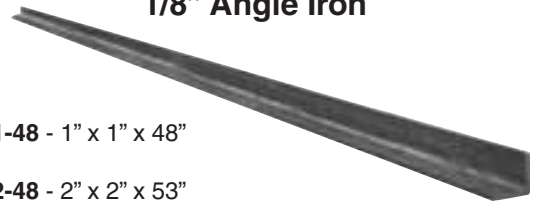

**CS-1811-48** - 1" x 1" x 48"

**CS-1822-48** - 2" x 2" x 53"

**DO YOU SNOW PLOW?**

**MILL SUPPLY CARRIES PLOW PARTS THAT FIT MEYER®, WESTERN®, FISHER®, DIAMOND®, SNO-WAY® AND BOSS®.**



**Parts include:**

- Blade Guides
- Lamps
- Hydraulic Fluid
- Mounting Cartons
- A-Frames
- Cutting Edges
- Springs
- Eye Bolts
- King Bolts
- Shoes
- Angle & Lift Cylinders
- Hoses & Fittings
- Deflectors
- Solenoids
- Switches
- Cables
- Power Units

**Plus:**

- Quick Mount Plow Carts
- Strobes
- Salt Spreaders
- Suspension Enhancement
- Bed Racks
- Utility Lighting





## HINGE PINS & BUSHINGS that fit GM

**98-805** - Hinge Pin Repair Kit: Fits 1999-05 Chevrolet Silverado, Suburban & Tahoe and GMC Sierra, Yukon and Yukon XL. Repairs one hinge.

**98-800** - Hinge Pin Repair Kit: Fits 2002-on GMC Envoy, Buick Rainier & Chevy Trailblazer. Repairs one hinge.

Economically repair worn out door hinge pins on vehicles with welded hinges without removing the hinge. Each kit repairs one hinge and includes: (2) case hardened forged pins with Dacromet, (2) bronze bushings, (2) lock nuts, (2) thru-hardened washers, installation instructions.



**AV-19725**  
Zinc Door Roller Pin Assembly that fits 1988-00 GM C-K Light Duty Trucks Not Available From O.E.M

Diameter: 9.16"  
Length: 5-1/2"  
Roller O.D.: 3/4"  
Roller Groove Dia: 5/8"  
Knurl Dia: 19/32"

UNIT PACKAGE: 1



**AV-19782**  
(Replaces OE#15672183)  
Zinc Door Roller Pin Assy that fits 1994-on Chevrolet/GMC S & T Mid Size Trucks. Use with AV-8829 E-Type Retaining Ring Rear Door Upper Hinge

Pin Diameter: 25/64"  
Overall Length: 5-1/16"  
Roller O.D.: 3/4"  
Roller Groove Diameter: 5/8"

UNIT PACKAGE: 1



**AV-19781**  
(Replaces OE# 15653790)  
Zinc & Yellow Door Hinge Pin that fits 1994-on S & T Mid Size Trucks  
Length: 4-1/8"  
Pin Diameter: 11/32"  
Shoulder O.D.: 3/8"  
Head O.D.: 1/2"  
Use with Bushings AV-16936 & AV-16937 & Pin Retainer AV-17976

UNIT PACKAGE: 2



**AV-19424**  
(Replaces OE# 15591860; 15691595; 15967691; 88891731)  
Stainless Steel Door Hinge Pin that fits 1988-On GM C-K Trucks  
Use with Bushings AV-16936 & AV-16937 & Pin Retainer 17976  
Length: 5-1/4"  
Pin Dia: 11/32"  
Shoulder O.D.: 3/8"  
Head O.D.: 9/16"

UNIT PACKAGE: 4



**AV-17343**  
(Replaces OE#15646148)  
Stainless Steel Door Hinge Pin that fits 1992-On GM Trucks C/K 1, 2, 3 four door Pick-Up Rear Door

Length: 4-1/8"  
Pin Dia: 11/32"  
Shoulder O.D.: 3/8"  
Head O.D.: 9/16"

UNIT PACKAGE: 5



**AV-17344**  
(Replaces OE# 15598845)  
Stainless Steel Door Hinge Pin that fits 1985-on GM Astro & Safari Mini-Van

Length: 3-1/4"  
Pin Dia: 11/32"  
Head O.D.: 1/2"

UNIT PACKAGE: 5



**AV-17437**  
(Replaces OE# 12338015, 14066728) Zinc & Yellow Door Hinge Pin that fits Astro/Safari Van and 1982-on S-10/S15  
Length: 4-5/32"  
Pin Dia: 11/32"  
Head O.D.: 15/32"

UNIT PACKAGE: 5



**98-759-P**  
(Replaces 6271989) Door Hinge Pin that fits 73-83 GM C/K Trucks.

Pin Dia: 5/16"  
Length: 4-1/8"

UNIT PKG: 1



**AV-19796 - 50pcs**  
**AV-1976P - each**  
(Replaces OE# 15562610)  
Stainless Steel Door Hinge Pin Retainer that fits 1988-on GM G/K Trucks. Used With 19424 & 19781 Door Hinge Pin  
21/64" I.D.;  
9/16" O.D.  
1/64" Thick



**AV-16936 - 25 pcs**  
**AV-16936P - each**  
(Replaces OE# 12338074, 15691493, 15964971, 16632193) Splined Side Door Upper Hinge Bushing that fits 1988-on GM C-K Trucks  
1/2" O.D.; 11/32" I.D.;  
23/64"H; 43/64" Flange O.D.



**AV-16937 - 25 pcs**  
**AV-16937P - each**  
(Replaces OE# 15562609, 15964972 & 16632192)  
Splined Door Lower Hinge Bushing that fits 1988-on GM C-K Trucks  
17/32" O.D.; 25/64" I.D.;  
23/64"H; 11/16" Flange O.D.



**98-750 - 50 pcs**  
**98-750P - each**  
(Replaces GM OE# 9721917; Ford #D1AZ-6522841A)  
Door Hinge Pin Bushing that fits 1979-93 GM C/K Trucks; 1973-on Ford Trucks  
27/64" O.D.; 11/32" I.D.;  
19/64"H; 19/32" Flange O.D.



**83-5711 - 25 pcs**  
**83-5711P - each**  
(Replaces OE# 20429500)  
Splined Door Hinge Pin Bushing that fits 1968-on GM Pickups and Vans  
31/64" O.D.; 11/32" I.D.;  
23/64"H; 19/32" Flange O.D.



**AV-8829 - 100 pcs**  
**AV-8829P - each**  
"E" Type Retaining Ring  
3/8" Shaft Dia.  
303" Groove Dia.  
039" Groove width.





**HINGE PINS & BUSHINGS that fit DODGE & PLYMOUTH**

**TRUCK DOOR HINGE PIN & BUSHING REPAIR KIT**

**Fits 1994-2003 Dodge Ram 1500, 2500 & 3500 Pick-up Trucks**


Each kit is designed to repair one hinge and contains one zinc and dichromate plated grade 8 bolt, two self-lubricating brass alloy bushings, one zinc plated spin lock nut and one zinc plated internal lock washer.



Here's how it works:

**AV-20544** - Door hinge pin and bushing repair kit for Dodge Truck.

- 1.) Remove door from truck body.
- 2.) Grind or cut off the end of the pin at the peened end.
- 3.) Remove the old pin and bushing.
- 4.) Install the bushings into the hinge holes.
- 5.) Place the washer on the bolt and install the bolt into the bushing.
- 6.) Thread the nut onto the bolt and tighten.
- 7.) Reattach door to truck.

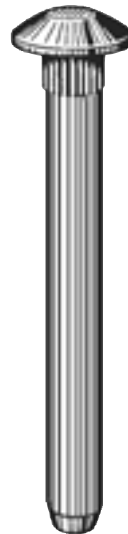

**AV-14562**

(Replaces OE# 6028993, 6032975)  
Door Hinge Pin that fits 1970-on Dodge & Plymouth Vans, Ramcharger and Trailduster. Used on Cargo doors, lift gates, rear doors and fold-up rear seats floor hinges.

Length: 2-3/4"  
Pin Dia: 17/64"  
Head O.D.: 9/16"

UNIT PACKAGE: 10



**AV-14552 - 50 pcs  
AV-14552P - each**

(Replaces OE# 4033711)  
Door Hinge Bushing that fits cargo doors and fold-up rear seat floor hinges on 1970-on Dodge & Plymouth Vans, Ramcharger & Trailduster

5/16" O.D.  
17/64" I.D.  
23/64"H  
33/64" Flange O.D.

**HINGE PINS & BUSHINGS that fit FORD**



**AV-20346**

(Not available from OE)  
Door Hinge Pin that fits 1980 - 98 Ford Ranger, and F150, F250, F350 Ford Pickup. Use with AV-8829 retaining ring

Length: 3-1/2"  
Pin Dia: 11/32"  
Knurl Dia: .358  
Head O.D.: 9/16"

UNIT PACKAGE: 5



**AV-8829 - 100 pcs  
AV-8829P - each**

"E" Type Retaining Ring  
3/8" Shaft Dia.  
.303" Groove Dia.  
.039" Groove width



**98-750 - 50 pcs  
98-750P - each**

(Replaces Ford #D1AZ-6522841A)  
Door Hinge Bushing that fits 1973-on Ford Trucks  
27/64" O.D.  
11/32" I.D.  
19/64"H  
19/32" Flange O.D.



**98-751 - 25 pcs  
98-751P - each**

(Replaces Ford #D90Z-6522841A)  
Door Hinge Bushing that fits 1973-on Ford Trucks  
31/64" O.D.  
11/32" I.D.  
19/64"H  
19/32" Flange O.D.








**BUTTONHEAD & COUNTERSUNK RIVETS**

**BUTTONHEAD**

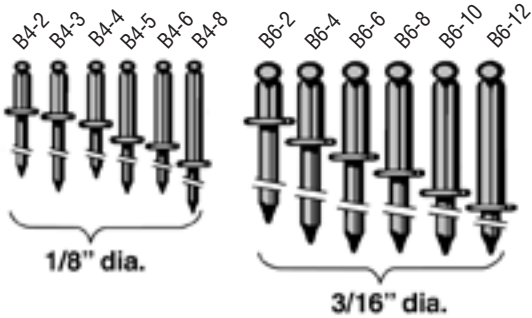

**COUNTERSUNK**



**MATCH YOUR RIVET WITH THIS ACTUAL SIZE RIVET CHART**

Place rivet on picture lining up rivet head with chart. The Mandrel (nail portion) length does not determine rivet size. If rivet length is between two sizes (i.e. B4-2 and B4-3) choose the larger size.

<b>RIVET CHART</b>				
<i>C = Countersunk      B = Buttonhead</i>				
Rivet Diameter	Rivet Size Head Sty	Grip Range	Part Number Plated Steel Rivet Steel Mandrel	Head Dia.
<b>1/8"</b>	B4-2	Up to 1/8"	<b>M40112</b>	1/4"
	C4-2	Up to 1/8"	<b>M40113</b>	.240
	B4-3	1/8" to 3/16"	<b>M40115</b>	1/4"
	C4-3	1/8" to 3/16"	<b>M40116</b>	.240
	B4-4	3/16" to 1/4"	<b>M40117</b>	1/4"
	C4-4	3/16" to 1/4"	<b>M40118</b>	.240
	B4-5	1/4" to 5/16"	<b>M40120</b>	1/4"
	B4-6	5/16" to 3/8"	<b>M40121</b>	1/4"
B4-8	3/8" to 1/2"	<b>M40122</b>	1/4"	
<b>3/16"</b>	B6-2	Up to 1/8"	<b>M40145</b>	3/8"
	B6-4	1/8" to 1/4"	<b>M40147</b>	3/8"
	B6-6	1/4" to 3/8"	<b>613638</b>	3/8"
	B6-8	3/8" to 1/2"	<b>M40152</b>	3/8"
	B6-10	1/2" to 5/8"	<b>M40155</b>	3/8"
	B6-12	5/8" to 3/4"	<b>M40159</b>	3/8"

**All 1/8" & 3/16" Rivets are Packaged 500/box**

**Countersunk Drill Bit**



**M-39100** - Countersunk Double Ended Drill Bit provides the correct size hole for 1/8 countersunk rivets. Countersunk rivets shown above are used to hide the head of the rivet into the metal allowing less bondo to be used.

**Double End High Speed Drill Bit**



**98808** - 1/8" double ended drill bit (12 pack)  
**90-316** - 3/16" double ended drill bit.

**QUALITY HIGH SPEED DRILL BITS  
MADE IN USA**

Size	Part No.
1/8	<b>90-008</b>
3/16	<b>90-012</b>

**QUALITY HAND RIVETER**

**M-39000** - Quality cast riveter will give you years of service. Known and trusted for durability, quality and performance. Patented design sets up to 3/16" all steel rivets. Includes four nosepieces mounted on riveter plus service tool.



**DELUXE RIVET KIT**




**M-39001** - A deluxe riveter kit that includes the M-39000 riveter. Also features an assortment of popular automotive rivets. Molded plastic case houses riveter, rivets and service tool. Special compartment holds optional countersink drill bit.

**21910 - DOOR HINGE SPRING TOOL FOR GM CARS & TRUCKS** - Use to replace or install springs with ease. Hardened thin blades provide easy access to spring. Use with 1/2" ratcheting box or open end wrench.



**DOOR HINGE "PIN POPPER"  
Part 21835 Two Piece Set**

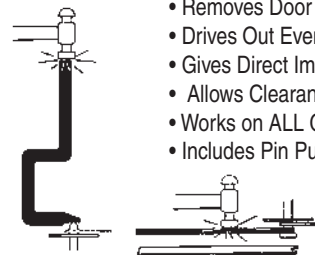

- Removes Door Hinge Pins Fast
- Drives Out Even Stubborn Hinge Pins
- Gives Direct Impact
- Allows Clearance for Door Panels
- Works on ALL GM Cars with Removable Hinge Pins
- Includes Pin Puller to Remove Loosened Pins

**KA - 376 - TRIM PAD REMOVAL TOOL** reaches under the trim panel to support, grip and remove plastic trim pad fasteners without damaging or scratching the surface. A must for GM cars... works on metal fasteners as well. Reverse end of tool used to remove door panels.



**KA-369** Remove moulding without ruining the clip or the moulding. Rock tool to spring clip and release moulding.

**21720 - Sure Grip Trim Clip Plier**

- Grips stem of clip
- Won't break clips
- Works faster and easier
- Works on trim pads, hood insulation, etc.





## Mirror Systems that fit GMC TopKick, Savana & Chevrolet G3500/Express 1996 and Newer



# VELVAC

Foldaway mirrors return to preset driving position without readjustment or need for tools.

Velvac's 2020 door mounted mirror systems fit the GMC TopKick truck providing an attractive and cost-effective alternative to the OE cowl mounted mirror.

- Deluxe head provides greater visibility around the vehicle when compared to OE mirror deluxe head is recommended for TopKick applications.
- Easily replaceable head and glass make for less expensive mirror system servicing.
- New black powder coated cover plate attaches quickly over OE mirror mounting area and provides a clean, finished appearance—one kit required per vehicle. Kit includes LH and RH.

### Complete Replacement Manual Mirror Assemblies by Velvac that fit 1996-on GMC TopKick, Savana & Chevrolet G3500/Express

Body Width	Color	Type	Pair	RH Side	LH Side
96"	Black	Deluxe	714545	714546	714547
96"	Black	Standard	714557	714558	714559

Cover Plate set (one pair). Attaches quickly over OE mirror 709785 mounting area. Black powder coat finish.

## Replacement Mirror Heads and Glass



714575

**STANDARD**

Standard mirror heads feature 57 (sq. in.) of flat glass plus a unique wedge-shaped corner convex for blind spot visibility.

The same Replacement Mirror Heads are used on GMC and Ford



714579

**DELUXE**

Deluxe Mirror Head includes independently adjustable flat (62 sq. in.) and convex glass (30 sq. in.)

### Replacement Mirror Heads

Color	Mirror Head	Part No.
Black	Deluxe, Manual, LH	714579
Black	Deluxe, Manual, RH	714580
Black	Deluxe, Heated/Remote, LH	714581
Black	Deluxe, Heated/Remote, RH	714582
Black	Standard - Universal	714575
Black	Standard, Heated/Remote	714577

### Replacement Glass

Part No.

Heated Flat Glass on Deluxe models. Fits LH or RH	709448
Heated Convex Glass on Deluxe models. Fits LH or RH	709589
Flat Glass & Wedge Mirror for Standard models. Fits L or R	709407

## Mirror Systems that fit E-350 Ford Econoline



1992 and Newer

# VELVAC



Foldaway mirrors return to preset driving position without readjustment or need for tools.

These mirror assemblies feature the original appearance and unique pivot design which allows the mirror head and arm to rotate safely 80° forward or rearward if impacted or, to prevent damage when maneuvering through tight spaces. The pivot also provides for an easy-to-locate preset driving position. This new mirror replaces the original equipment mirrors and installs in existing mounting pockets using factory mounting holes.



Standard Mirror Head

Standard mirror heads feature (57 sq. in.) of flat glass plus a unique wedge-shaped corner convex for blind spot visibility.



Deluxe Mirror Head

The same Replacement Mirror Heads are used on GMC and Ford See lower left of this page.

Deluxe Mirror Head includes independently adjustable flat (62 sq. in.) and convex glass (30 sq. in.)

### 1992-2002 Complete Replacement Manual Assemblies

Body Width	Color	Mirror Assy.	Pair	Right Side	Left Side
102"	Black	Deluxe	714470	714472	714471
102"	Black	Standard	714485	714486	714487
96"	Black	Deluxe	714467	714468	714469
96"	Black	Standard	714482	714484	714483

### 2003 & Newer Complete Replacement Manual Assemblies

Body Width	Color	Mirror Assy.	Pair	Right Side	Left Side
102"	Black	Deluxe	715452	715454	715453
102"	Black	Standard	715407	715408	715409
96"	Black	Deluxe	715449	715450	715451
96"	Black	Standard	715404	715406	715405

## Mirror Systems that fit 1998 & Newer

# VELVAC Ford Super Duty F-250-F-750

### Complete Replacement Manual Mirror Assemblies by Velvac

Body Width	Color	Type	Pair	RH Side	LH Side
102"	Black	Deluxe	714518	714520	714519
102"	Black	Standard	714530	714532	714531
96"	Black	Deluxe	714515	714516	714517
96"	Black	Standard	714527	714528	714529

All manufacturers' names, numbers, and descriptions are used for reference purposes only. It is not implied that any part listed is the product of the original manufacturers or approved by any of these manufacturers.





## Front and Rear Air Helper Springs




### Coil-Rite™

Provide lift assistance to a coil spring suspension, with a carrying capacity of up to \*1000 lbs. per set.



### Ride-Rite®

Provide assistance to a leaf spring suspension, capable of \*5000 lbs. lift capacity at 100 p.s.i., enhancing the ride of your vehicle.

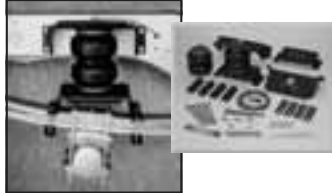

### Level-Rite™



Certain factory suspension configurations do not allow the fitment of a stand-alone air spring. In these instances, it is necessary to pair the air spring with the shock absorber to achieve meaningful load capability while maintaining a hassle free installation. For these applications, Firestone has designed a fully-protected, reversible sleeve air spring and paired it with a high-performance Bilstein monotube shock absorber for perfectly matched performance characteristics over the entire operating spectrum. Level-Rite.

\* Do not exceed the recommended GVWR of the vehicle

Year	Description	Type	Axle	Part No.
<b>Applications that fit Chevrolet / GMC</b>				
73-87	C10, 20, 30, 1500, 2500, 3500 (4x2) 1/2, 3/4, 1 Ton PU	Coil Rite	FRONT	4100
73-91	Blazer/Jimmy (4x2) Full Size	Coil Rite	FRONT	4100
01-03	C-1500 HD Silverado, Sierra (4x2, 4x4)	Level-Rite	FRONT	1003
99-05	C-2500, Silverado, Sierra (4x2, 4x 4) (not HD)	Level-Rite	FRONT	1003
01-07	C-2500, 3500, HD, Silverado, Sierra (4x2, 4x4)	Level-Rite	FRONT	1003
00-07	Suburban 2500 (4x2, 4x4), Yukon XL 2500 (4x4, 4x2)	Level-Rite	FRONT	1003
88-98	C/K 1500, 2500, (3500 fits 1988-2000) 1/2, 3/4, 1 Ton PU & Dually	Ride-Rite	REAR	2025
99-05	Silverado/Sierra 2500 (new body style) (4x2) (4x4) 3/4 Ton PU	Ride-Rite	REAR	2190
01-09	2500/C2500 HD, 3500/C3500 HD, (4x2, 4x4)	Ride-Rite	REAR	2250
<b>Applications that fit Dodge</b>				
94-01	Ram 1500 (4x4) (4x2)	Ride-Rite	REAR	2071
02-08	Ram 1500 (4x4) (4x2)	Ride-Rite	REAR	2286
03-10	Ram 2500, 3500 (4x2) (4x4)	Ride-Rite	REAR	2299
03-10	Ram 2500, 3500 (4x4 only)	Level-Rite	FRONT	1004
<b>Applications that fit Ford</b>				
63-03	F150, 250 (69-96) under 8500 GVW, 350 (63-03)	Ride-Rite	REAR	2071
84-08	F250 (4x2) (F250 over 8500 GVW), F350 (4x4)	Ride-Rite	REAR	2071
70-10	F350 (4x2, 4x4) with 7.5" min. tire to frame clearance	Ride-Rite	REAR	2071
97-04	F150 (Heritage) (4x4) - F250 (under 8500 GVW) (Not Shown Above)	Sport-Rite	REAR	2320
04-08	F150 (4x2, 4x4) (not FX2 or Harley Davidson) Min. 8" frame clearance	Ride-Rite	REAR	2350
05-09	F250, F350 (4x2, 4x4) (over 8500 GVW) without in-bed hitch	Coil-Rite	REAR	2452
68-96	F100 (68-79), 150 (68-96), (4x4) (4x2); 80-96 Bronco (4x4) Sport Utility	Coil-Rite	FRONT	4102
84-04	F250, F350 (4x4) (over 8500 GVW)	Ride-Rite	FRONT	2223
84-10	F250, F350 (4x2) (over 8500 GVW)	Coil Rite	FRONT	4101
05-10	F250 (over 8500 GVW) - F350, F450 (4x4)	Coil-Rite	FRONT	4161

## For instant air pressure adjustment use Firestone Air Compressors



**2158 - Level Command II**  
Standard Duty Compressor Single Gauge Inflates Air Springs Equally



**2168 - Dual Air Command**  
Heavy Duty Compressor Dual Gauge Inflates Air Springs Individually

All manufacturers' names, numbers, and descriptions are used for reference purposes only. It is not implied that any part listed is the product of the original manufacturers or approved by any of these manufacturers.

## Front & Rear Suspension Enhancement Kits



**Cost Efficient:** Reduced maintenance costs and less downtime for snowplow operators.

**Smoother Ride:** Eliminate the high cost and harsh ride caused by added leaf springs or helper springs to carry rear mounted/top heavy spreaders.

**Longer Suspension Life:** Timbren 'AEON' Hollow Rubber Springs carry most of the added vehicle load, allowing a much longer life for your truck's suspension.


Front Applications that fit GM	WD	Year	Part No.
1500 Sierra, Silverado, Denali, Avalanche	4WD	99-06	325-0020
1500HD, 2500, 2500HD, 2500 Avalanche, 3500	2/4WD	99-10	325-0025
K2500, K3500 with cast lower control arm	4WD	96-00	325-0025
1500 Sierra, Silverado, Denali, Avalanche	4WD	07-09	325-0027
1500 Sierra, Silverada with front coil springs	2/4WD	07-09	325-0028
K1500, 2500	4WD	88-99	325-0035
K3500	4WD	88-95	325-0035
S-10, S-15, Sonoma	2/4WD	85-04	325-0022
Front Applications that fit FORD	WD	Year	Part No.
F150, Excluding Heritage	2/4WD	04-10	325-0040
F150 & F150 Heritage	4WD	97-04	325-0043
F250, F350 Super Duty	2/4WD	05-10	325-0042
F250, F350 Super Duty (with snow plow prep pkg.)	4WD	00-04	325-0046
Front Applications that fit DODGE	WD	Year	Part No.
Ram 1500	4WD	02-05	325-0085
Ram 1500, Regular and Quad Cab	2/4WD	06-10	325-0087
Ram 1500 MegaCab 06-08; also fits Ram 1500 94-01	4WD	06-08	325-0080
Ram 2500, 2500HD, 3500	4WD	94-10	325-0080
Rear Applications that fit GM	WD	Year	Part No.
1500 Sierra, Silverado, Excluding 4WD 4DR Z71	2/4WD	99-06	326-0031
1500 Sierra, Silverado, Denali; Excl: 1500 HD	4WD	07-09	326-0031
1500 Sierra, Silverado, 4WD 4DR Z71	4WD	99-06	326-0032
1500HD, Sierra, Silverado	2/4WD	01-07	326-0032
2500, 2500HD Sierra, Silverado	2/4WD	99-10	326-0032
Rear Applications that fit FORD	WD	Year	Part No.
F150	4WD	09-10	326-0061
F150, Excluding Heritage	2/4WD	04-08	326-0060
F150 97-03, Heritage 04	2/4WD	97-04	326-0063
F250 Super Duty	2/4WD	05-10	326-0064
F350 Super Duty	2/4WD	05-10	326-0069
Rear Applications that fit DODGE	WD	Year	Part No.
Ram 1500	4WD	02-05	326-0090
Ram 1500 Reg. & Quad Cab; also fits Ram 1500 94-01	4WD	06-08	326-0092
Ram 1500 MegaCab	4WD	06-08	326-0090
Ram 1500 Excluding Quad Cab	2/4WD	09-10	326-0091
Ram 1500 Quad Cab	2/4WD	09-10	326-0098
Ram 2500	4WD	03-10	326-0090
Ram 3500	2/4WD	03-10	326-0095
Ram 2500HD, 3500 w/4" diameter axle	4WD	00-02	326-0097




**Bold Type** - New Item • \*\* Too large for UPS • N.I. Not Illustrated  
800-888-5072 • Toll Free Fax 888-781-2700  
Visit our web site: www.rustrepair.com



# MOLDED SPONGE RUBBER WEATHERSTRIP




**AV-4746 - 50ft \$51.97**  
**AV-16393 - 15ft \$14.66**  
 Door flange weatherstrip  
 Chrysler 1958-on

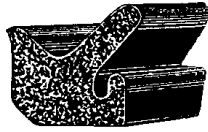

**AV-4745 - 50ft \$47.25**  
**AV-16392 - 15ft \$17.12**  
 Door flange weatherstrip  
 55-on Ford



**AV-4744 - 50ft \$49.71**  
**AV-16391 - 15ft \$17.02**  
 Door flange weatherstrip  
 55-on GM

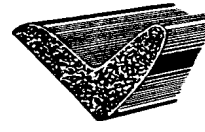


**AV-4747 - 50ft \$36.29**  
 Door inner belt weatherstrip  
 All cars 1955-'70



**AV-16524 - 50ft \$49.20**  
 Door seal weatherstrip  
 GM 1964-'72




**50-73-90 - 13ft. 6in \$19.57**  
 Door weatherstrip Chevrolet, Ford & Dodge trucks 1973-'87. Mounted on post and header. Enough for one door.

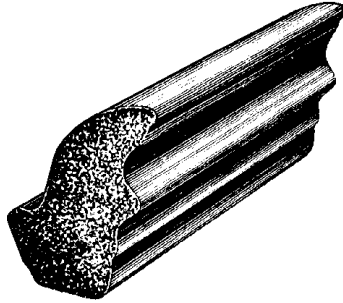

**AV-4749 - 50ft \$71.34**  
**AV-16394 - 15ft \$25.32**  
 Deck lid weatherstrip: GM Cars 1956-on.




**AV-4675 - 50ft \$48.14**  
**AV-16390 - 15ft \$16.05**  
 Door flange weatherstrip  
 GM, Ford, Chrysler, car & truck

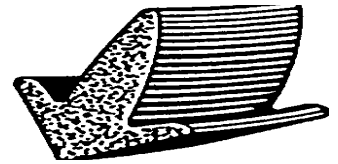


**AV-4707 - 50ft \$40.08**  
 Door Flange weatherstrip  
 Chrysler 1950-54  
 Ford 1950-58




**AV-16525 - 50ft \$53.30**  
 Door seal weatherstrip  
 GM 1955-63

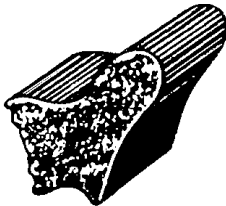


**AV-16523 - 50ft \$57.40**  
 Door seal weatherstrip  
 GM 1972-on

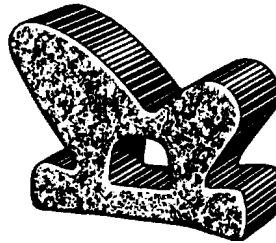


**AV-16892 - 25ft \$44.49**  
 Roof rail weatherstrip  
 GM 1968-'77

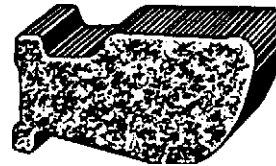


**AV-16522 - 25ft \$47.15**  
 Top of door seal  
 GM late 1970's

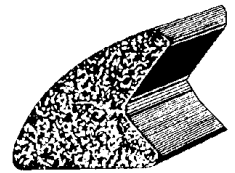


**AV-4742 - 50ft \$52.17**  
 Trunk and rear deck lid weatherstrip: GM 1959-on; Studabaker 1955-'67; Ford, Lincoln, Mercury 1949-on.

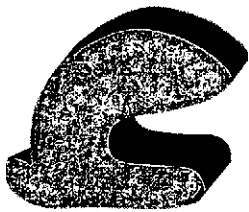


**AV-4743 - 35ft \$58.84**  
 Univ. trunk weatherstrip

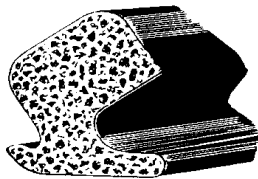

**AV-4703 - 50ft \$60.37**  
**AV-16395 - 15ft \$25.63**  
 Trunk and rear deck gutter weatherstrip - GM

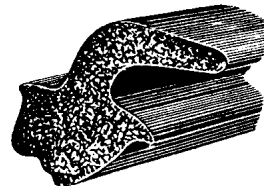


**AV-4750 - 50ft \$61.40**  
 Deck lid weatherstrip: Ford Cars 1956-on.

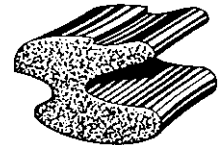

**AV-4712 - 50ft \$76.26**  
 Trunk and rear deck lid weatherstrip GM Cars 1949-'54.

## PEEL BAK ADHESIVE SPONGE WEATHERSTRIP

Auveco sponge rubber weatherstrip, with its variety of sizes, is used in many old and new settings for the automotive, commercial and residential industry. Peel-back linen tape design eliminates the use of adhesives. Special light-weight closed cell sponge material will press on any clean dry surface.

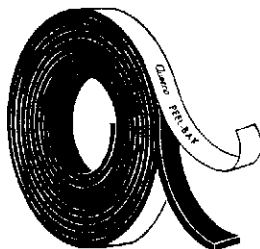

50 ft. Roll

Thickness	Width	Part No	Price
5/32"	3/8"	AV-4850	\$13.33
5/32"	1/2"	AV-4851	\$19.85
5/32"	3/4"	AV-4852	\$22.80
5/32"	1"	AV-4853	\$30.72
5/16"	3/8"	AV-4854	\$15.94
5/16"	1/2"	AV-4855	\$21.96
5/16"	3/4"	AV-4856	\$31.67
5/16"	1"	AV-4857	\$40.12
7/16"	3/8"	AV-4858	\$23.23
7/16"	1/2"	AV-4859	\$27.03
7/16"	3/4"	AV-4860	\$39.17
7/16"	1"	97-861	\$51.25

## WEATHERSTRIP ADHESIVE



High strength weatherstrip adhesive. Bonds rubber and vinyl weatherstrip on doors, trunks and windows.  
**3M-8001** - Super weatherstrip adhesive, yellow **\$7.25/5 oz.**  
**8B** - Super weatherstrip adhesive, black **\$4.86/ 5 oz**