


FRONT AIR HELPER SPRINGS for STEP VANS by FIRESTONE

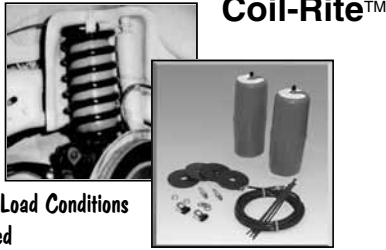


- Improve Ride Handling
- Prevent Bottoming Out
- Reduce Suspension Fatigue
- Installs with Hand Tools
- Adjustable to Different Road and Load Conditions
- Manual Inflation Hardware Included
- Optional Air Accessory Kits Available (See above)

4100 - Coil-Rite™ Kit that fits GM & Workhorse Chassis 1963-2003 P-30, P-32 Class "A"

4101 - Coil-Rite™ Kit that fits FORD E-350 Chassis thru current year. Pre 1991 may require tailpipe modifications.


89-406 - Replacement Air Bag Only (sold each) fits FORD

REAR AIR HELPER SPRINGS

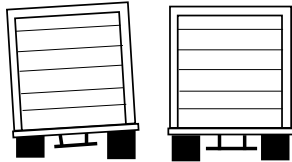

Quickly compensate for unevenly loaded trucks with the touch of a switch in your cab.

Provide assistance to a leaf spring suspension. Level your vehicle when one side carries most of the weight. Do not exceed the recommended GVW of the vehicle.

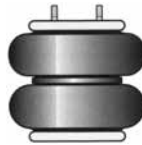

APPLICATIONS that fit

63-92	P30 Stepvan	2080
	Replacement air bag: 89-401	
93-96	P30 Stepvan 10,500 to 12,800 GVW	2080
	Replacement air bag: 89-401	
93-99	P30/P32 Class "A", 14,500 to 16,000 GVW &	2085
00-07	'00-'07 Workhorse Class "A" 10,500 to 17,000 GVW	
	Mounts underneath frame & over axle. Repl. air bag: 89-401	
00-08	P30/32 Class "A" 10,500 to 16,000 GVW	2147
	Mounts outside of frame & over spring. Repl. air bag: 89-402	
02-06	Sprinter 2500 cab & chassis, Freightliner/Dodge	2312
	must have 6" tire-frame clearance Replacement air bag: 89408	
07-09	Sprinter 2500 cab & chassis, Freightliner/Dodge	2447
02-06	Sprinter 3500 van, Freightliner/Dodge	2425
02-06	Sprinter 3500 cab & chassis, Freightliner/Dodge	2382
07-09	Sprinter 3500 cab & chassis, Freightliner/Dodge	2445
	Replacement air bag for 2080 & 2085	89-401
	Replacement air bag for 2147 & 2218	89-402
	Replacement air bag for 2312	89-408

For Instant Air Pressure use Firestone Air Compressors




2158 - Level Command II
Standard Duty Compressor, Single Gauge Inflates Air Springs Equally




2168 - Dual Air Command
Heavy Duty Compressor, Dual Gauge Inflates Air Springs Individually

SUSPENSION ENHANCEMENT KITS for STEP VANS by TIMBREN

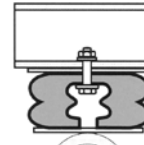

LOADED

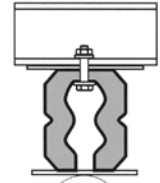

UNLOADED

When your truck is loaded, powerful Aeon® hollow rubber springs progressively carry the additional weight, preventing spring sag and bottoming out. Since the Aeon® Hollow Rubber Springs carry most of the added load, your truck suspension will last longer. The design of the Timbren Kit and the progressive rate of the Aeon® spring mean that there is no interference with the normal activity of the suspension when the truck is fully loaded.

Applications that fit GM/Workhorse Chassis Step Vans

Applications for the Front

Year	Description	Parts No.
75-05	P30, P32, P42, P60, W20 with Ind. Susp. (coil spring)	342-0050
75-10	P42, W20/22/24 with "I" beam front axle (leaf spring)	342-0051
06-10	W42	342-0051
07-10	W62	342-0051
75-03	P60 with "I" beam front axle (leaf spring)	342-0052

Applications for the Rear

75-05	P30, P32, W20 with Ind Susp. (coil spring)	342-0070
75-03	P42B, P60 with I-Beam Susp (leaf spring)	342-0070
95-05	P30, P42, P60 with bump stop over U bolt pad	342-0071
00-10	P42, W20, W22 W24 with I-Beam Susp. (leaf spg)	342-0053
07-10	W62	342-0053
00-05	P30, P42, P60 with bump stop on frame	342-0056
06-09	W42	342-0056

Applications that fit Sprinter Chassis Step Vans

Applications for the Front with Sprinter Chassis

02-10	Freightliner, Dodge and Mercedes 2500 & 3500	342-0057
-------	--	-----------------

Applications for the Rear with Sprinter Chassis

02-06	Freightliner, Dodge and Mercedes 2500	342-0072
07-10	Freightliner, Dodge and Mercedes 2500	342-0078
02-06	Freightliner, Dodge and Mercedes 3500	342-0073
07-10	Freightliner, Dodge and Mercedes 3500	342-0079

	Front	Rear
Applications that fit Freightliner MT-45		
Freightliner MT-45, straight rail	342-0058	342-0074
Freightliner MT-45/55 curved rail	342-0083	342-0084

Applications that fit Oshkosh/John Deere

Oshkosh VX series, John-Deere D,M 400/600	342-0058	342-0084
Oshkosh M Series	342-0083	342-0084

Applications that fit Ford E-350/450 Chassis Step Vans

87-10	Ford E-350 incl. Super Duty w/stripped chassis	342-0055	342-0075
96-10	Ford E-450 incl. Super Duty w/stripped chassis	342-0055	342-0077

Applications that fit Isuzu NPR

88-09	Isuzu Cab Forward	342-0081	342-0082
-------	-------------------	-----------------	-----------------